





EASY EZ PUMP SET-UP

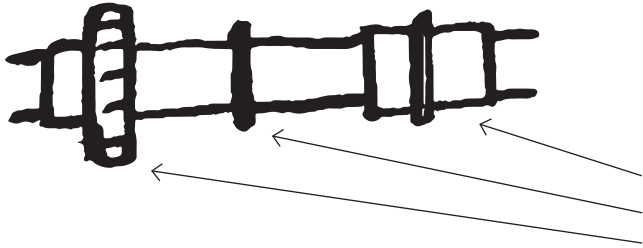

STEP 1

CHECK FOR THE FOLLOWING THREE PARTS ON THE EZ PUMP:


1. LOCKING RING
2. RUBBER O RING
3. CAP COLLAR

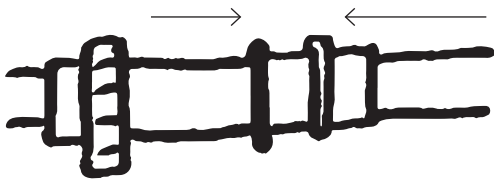

STEP 2


MOVE THE LOCKING RING INTO POSITION ACCORDING TO THE HEIGHT OF THE 20L FILL DRUM.

THEN MOVE THE RUBBER O RING DOWN SO THAT IT SITS AT THE TOP OF THE LOCKING RING.

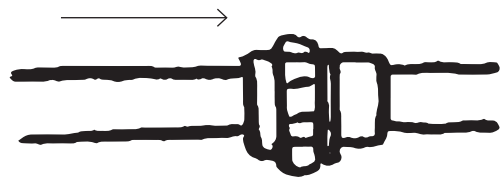

STEP 3

SLIDE THE CAP COLLAR DOWN TO MEET THE RUBBER O RING & LOCKING RING.

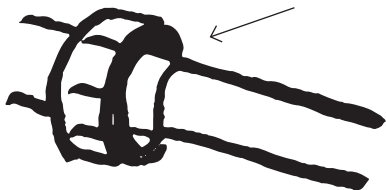

STEP 4

HOLD THE LOCKING RING FIRMLY WHILST PUSHING THE CAP COLLAR DOWN OVER THE LOCKING RING THE RUBBER O RING WILL MOVE UP INTO THE CAP COLLAR & FIT NICELY.

STEP 5

THE EZ PUMP IS NOW READY TO SCREW ONTO THE DRUM.
EASY.

ANY PROBLEMS MAIL US HELLO@FILLREFILL.CO

